
3: CONNECTED - START CONTROLLING THE ACCESSORIES VIA THE APP

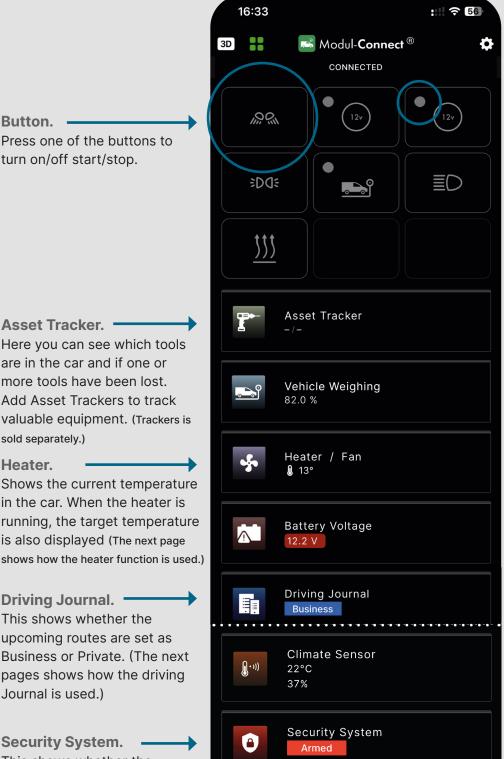

Circle.

A small circle in the left corner of a button means the accessory has a timer function. This is lit when active.

are in the car and if one or more tools have been lost. Add Asset Trackers to track valuable equipment. (Trackers is sold separately.)

Shows the current temperature in the car. When the heater is running, the target temperature is also displayed (The next page

This shows whether the upcoming routes are set as pages shows how the driving

This shows whether the security system is on or off. Vechile Weighing System. Here the vehicle's weight is displayed, click the button to see the front/rear weight distribution.

Battery Voltage.

Battery voltage is displayed here. If it is too low, voltage is displayed like this with a red background.

Climate Sensor.

The vans interior temperature and humidity are shown here. If the limit is exceeded, the values are displayed with a red background..